

WARRANTY INFORMATION

We sincerely thank you for your purchase and wish you years of pleasure using it!

Tele Vue Warranty Summary

Eyepieces, Barlows, Powermates, & Paracorr have a "Lifetime Limited" warranty, telescopes & accessories are warranted for 5 years. Electronic parts are warranted for 1 year. Warranty is against defects in material or workmanship. No other warranty is expressed or implied. No returns without prior authorization. Please keep your receipts in case you need warranty service.

Lifetime Limited Warranty details online: http://bit.ly/TVOPTLIFE
5-Year/1-Year Warranty details online: http://bit.ly/TVOPTLIMITED
Subscribe to our Blog for the latest Tele Vue news: https://bit.ly/TeleVueBlog

	Keep For Your Records
Dealer:	City/State/Country:
Date (day/month/year):/	/ Item Code / Description

32 Elkay Dr., Chester, New York 10918 (845) 469-4551. televue.com











@televueoptics

POWERMATE TO T-RING ADAPTER INSTRUCTION

Overview

The Powermate T-Ring Adapters allow imaging through Powermate lens assemblies. The adapters are different for the 2x and 4x and the same for the 2.5x and 5x models. However, the installation instructions are basically the same for all.

Steps

- 1. Unscrew black barrel of the 2x Powermate, or top half of black barrel of the 2.5x, 4x or 5x Powermate and set aside.
- 2. There is only one way for the Powermate T-Ring Adapter to fit on the Powermate lens assemblies: through an internal thread on one side of the T-Ring Adapter. Slip this over the top of the Powermate lens assemblies and screw together tight.
- 3. Thread your camera's T-Ring onto the T-Ring Adapter. Attach camera body.

4. Any couplings for CCD cameras with female T-threads can be threaded onto the T-Ring Adapter.



POWERMATE TO T-RING ADAPTER INSTRUCTION

Overview

The Powermate T-Ring Adapters allow imaging through Powermate lens assemblies. The adapters are different for the 2x and 4x and the same for the 2.5x and 5x models. However, the installation instructions are basically the same for all.

Steps

- 1. Unscrew black barrel of the 2x Powermate, or top half of black barrel of the 2.5x, 4x or 5x Powermate and set aside.
- 2. There is only one way for the Powermate T-Ring Adapter to fit on the Powermate lens assemblies: through an internal thread on one side of the T-Ring Adapter. Slip this over the top of the Powermate lens assemblies and screw together tight.
- 3. Thread your camera's T-Ring onto the T-Ring Adapter. Attach camera body.

4. Any couplings for CCD cameras with female T-threads can be threaded onto the T-Ring Adapter.



POWERMATE TO T-RING ADAPTER INSTRUCTIONS

Overview

The Powermate T-Ring Adapters allow imaging through Powermate lens assemblies. The adapters are different for the 2x and 4x and the same for the 2.5x and 5x models. However, the installation instructions are basically the same for all.

Steps

- 1. Unscrew black barrel of the 2x Powermate, or top half of black barrel of the 2.5x, 4x or 5x Powermate and set aside.
- 2. There is only one way for the Powermate T-Ring Adapter to fit on the Powermate lens assemblies: through an internal thread on one side of the T-Ring Adapter. Slip this over the top of the Powermate lens assemblies and screw together tight.
- 3. Thread your camera's T-Ring onto the T-Ring Adapter. Attach camera body.

Any couplings for CCD cameras with female T-threads can be threaded onto the T-Ring Adapter.

